





 = Green Flash  = Red Flash  = Yellow Flash  = Beep

CCW  = Counterclockwise **CW**  = Clockwise

ERROR =      






To **CLEAR** an entry, **press and hold**  until .      

SET LOCK USER COMBINATION AND SECURE LOCK

1. Close door and turn lock knob CCW  to the “locked” position.
2. Enter a 4-7 digit combination. **Press and hold** **#** until .
3. Enter combination again to verify. **Press and hold** **↑** until .



 , long  , long   **Check to ensure lock is locked.**

UNLOCK WITH LOCK USER COMBINATION

1. Enter the 4-7 digit lock user combination.  , long  
2. Turn lock knob CW  to “unlocked” position and open door.

ATTENTION: Please leave container unlocked when finished with use.

RELOCK WITH LOCK USER COMBINATION

1. Close door and turn lock knob CCW  to the “locked” position.
2. Enter the 4-7 digit lock user combination. **Press and hold** **↑** until .

 , long  , long   **Check to ensure lock is locked.**